



CN-100

OPERATION MANUAL

INTRODUCTION:


This model is 1 CH. strobe controller, features SPEED and DIMMER control. It is a portable and easily operated design.

SPECIFICATION:


POWER INPUT	AC 220-240V~50Hz
FLASH RATE	20 flashes per sec. max.
DIMMER OUTPUT	DC 0-10V, 30mA max.
DIMENSION	130(L)x42(W)x155(H) mm(5 1/8"x1 5/8"x6 1/8")
WEIGHT	0.5 Kg(1.10 lbs)

CONTROLS & FUNCTIONS

FRONT PANEL

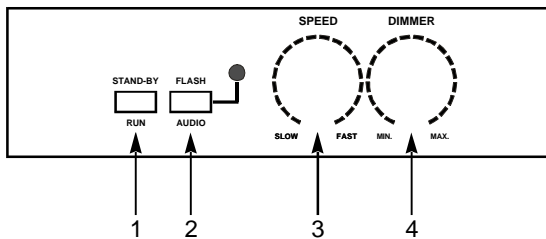

REAR PANEL

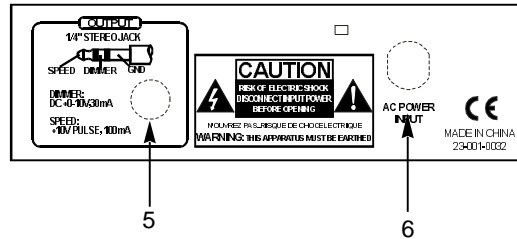

1. STAND-BY / RUN SWITCH

Push the switch to IN position to turn the power on.

2. FLASH / AUDIO SWITCH

Push the switch IN, it is in AUDIO mode, the strobe will be controlled by music rhythms detected by the built-in microphone. Push the switch OUT, it is in FLASH mode, the strobe will flash dependent on the pre-set program.

3. SPEED control

This control adjusts the flash speed of strobe.

4. DIMMER control

This control adjusts the dimming level of strobe.

5. 1/4" STEREO JACK

DIMMER and SPEED output

6. POWER INPUT

Plug in the power of AC 220-240V~50Hz.

WARNING:

1. THIS APPARATUS MUST BE EARTHED.
2. DISCONNECT POWER CABLE BEFORE OPENING.
3. USE ONLY RECOMMENDED STEREO JACK.
4. TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THE APPARATUS TO RAIN OR MOISTURE.

