



CT-4003

OPERATION MANUAL


INTRODUCTION:

This model is designed for Disco, Stage, Mobile. Neon advertising signboard. It has 2 operating modes: CHASE and AUDIO. In CHASE mode, speed can be adjusted.

SPECIFICATIONS:

POWER INPUT	AC 220V-240V~50Hz
CHANNEL OUTPUT	0.05-5A per channel, total 6.3A max.
FUSE	F6.3A 250V 20x5mm
DIMENSIONS	225x 145x 50mm
WEIGHT	0.82KGS

CONTROLS & FUNCTIONS

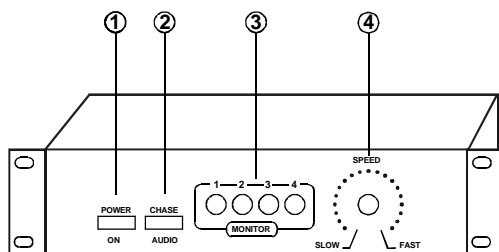

1. POWER switch

2. CHASE / AUDIO switch button

In CHASE mode, the pattern is executed automatically and the running speed is adjusted by SPEED control; in AUDIO mode, the pattern is executed with the music rhythm.


3. Output indicators

These indicators light when corresponding channel is on.

4. SPEED control

This control adjusts the running speed of the pattern in CHASE mode.

To set up proper connection of external load, please refer to the wire diagram illustrated by right figure:

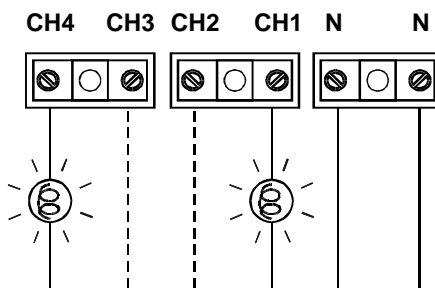

! WARNING:

1. **THIS APPARATUS MUST BE EARTHED.**
2. **RISK OF ELECTRIC SHOCK, DISCONNECT INPUT POWER BEFORE OPENING.**
3. **TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.**
4. **REPLACE THE FUSE WITH THE SAME TYPE.**

