



CT-4010 4CH. CHASE CONTROLLER

OPERATION MANUAL


PRODUCT DESCRIPTION:

This model is a 4 CH. chase controller, has 16 pre-set chasing patterns and AUTO/MANUAL/MUSIC/FULL ON/STAND-BY mode, chasing speed and audio level can be adjusted.

TECHNICAL SPECIFICATIONS:


POWER INPUT	AC 230V~50Hz
EXTERNAL INPUT	AC12-230V, 16A
CHANNEL OUTPUT	0.05A-5A per channel, Total 16A
FUSE (internal).....	F0.5A 250V 5x20mm
CHANNEL FUSE	F6.3A 250V 5x20mm
DIMENSIONS	482x136x60mm
WEIGHT	1.8Kg

CONTROLS & FUNCTIONS

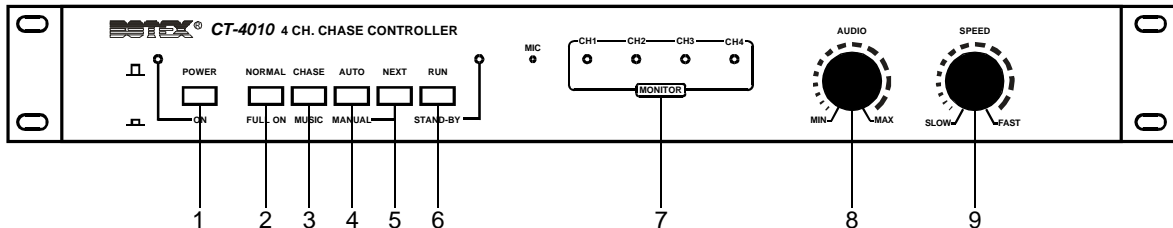

1. **POWER SWITCH**
2. **FULL ON / NORMAL BUTTON**
Press the button to IN, it is in FULL ON mode;
press the button to OUT, it is in NORMAL mode.
3. **CHASE / MUSIC BUTTON**
Press the button to IN, the chase of program is triggered by music
Press the button to OUT, the chase is controlled by auto speed
4. **MANUAL / AUTO BUTTON**
Press the button to IN, MANUAL is activated.
Press the button to OUT, AUTO is activated.
5. **NEXT BUTTON**
The button is effective in manual mode, you can select program step by step.
6. **STAND-BY/RUN BUTTON**
Press this button to IN, all output is paused unless FULL ON is activated ,
Press this button to OUT, it resume NORMAL mode.
7. **CHANNEL OUTPUT LED**
It is lit when corresponding channel is turned on.
8. **AUDIO LEVER CONTROL**
This control adjusts the sensitivity of the music detected by the built-in microphone.
9. **SPEED CONTROL**
This control adjusts the flash speed of strobe

To set up proper connection of external load, please refer to the wire diagram illustrated by right figure:

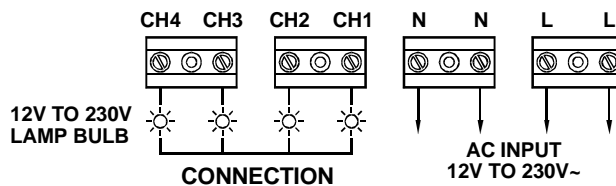

WARNING:

1. THIS APPARATUS MUST BE EARTHED.
2. DISCONNECT POWER CABLE BEFORE OPENING.
3. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.
4. REPLACE THE FUSE WITH THE SAME TYPE.

