



MULTI PACK OPERATION MANUAL

PRODUCT DESCRIPTIONS:

This model is a 4 channel DMX & MIDI Power Pack, has RECEIVING & CHASING operating modes, built-in EEPROM is incorporated with this unit to store operating mode and programming options.

TECHNICAL SPECIFICATIONS:

POWER INPUT	AC 230V~50Hz, 16A max.
CHANNEL OUTPUT	5A /CH., Total 16A
FUSE	(Internal)F0.315A 250V 5x20mm
	(CH. Fuse) F6.3A 250V 5x20mm
DIMENSIONS	212x188x71mm
WEIGHT	2.4Kg

CONTROLS & FUNCTIONS

1. CHANNEL OUTPUT

5A per channel, Total 15A.

2. CHANNEL LEDs

It is lit when corresponding channel is ON.

3. LCD DISPLAY

It shows the operating mode and function parameter, specified as follows:

CH:01 — CH:16	MIDI-IN CHANNEL
n:001 — n:128	NOTE NUMBER
A:001 — A:512	DMX CHANNEL
P:01 — P:16	CHASE PROGRAM
SP:01 — SP:99	CHASE SPEED
d:000 — d:100	CHASE DIMMER

4. MODE BUTTON

Press to select operating mode from RECEIVE and CHASE modes.

5. MENU BUTTON

Press to select display item in LCD.

MODE+MENU BUTTONS

Press to select RECEIVE mode between Separate and Parallel modes.

6. UP BUTTON ▲

Press to increase the display value.

7. DOWN BUTTON ▼

Press to decrease the display value.

8. POWER INPUT

AC 230V~50Hz, 16A max.

9. DMX IN

Use to receive DMX data.

10. DMX OUT

Use to output DMX data.

11. CHANNEL FUSE

F6.3A 250V 5x20mm

12. MIDI IN

Use to receive MIDI data.

13. MIDI THRU

Use to output the data received on the MIDI IN connector.

14. REMOTE INFRARED SENSOR



Use to detect the remote infrared signals.

15. LINK IN

Use to receive the information from another Midipak or plug in external infrared detector.

16. LINK OUT

Use to output the information to another Midipak.

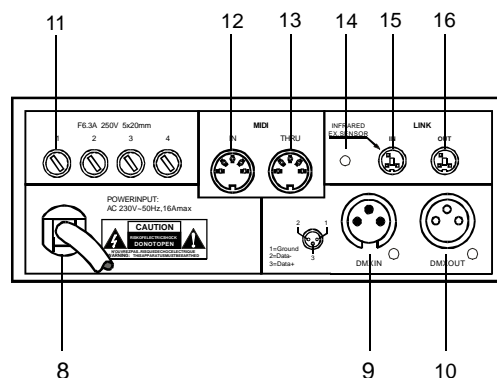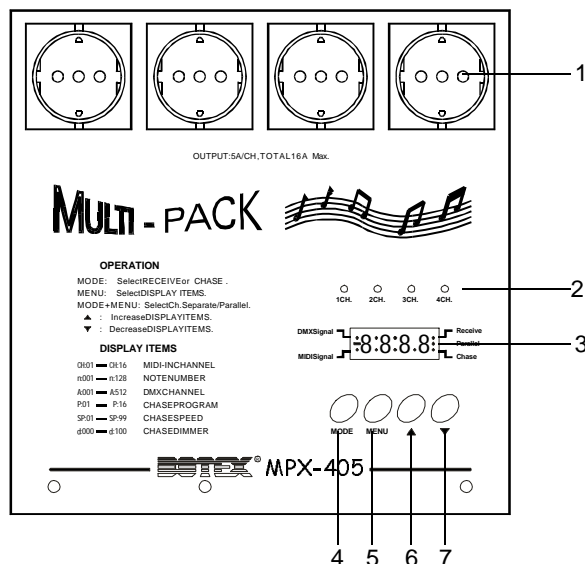

INSTRUCTIONS OF REMOTE CONTROLLER

CONTROLS & FUNCTIONS

1. STAND BY BUTTON

Press to pause all channels output, press it once more to return to normal mode.

2. MENU BUTTON

Press to select display item in LCD.

3. RECEIVE BUTTON

Press to select RECEIVE mode.

4. CHASE BUTTON

Press to select CHASE mode.

5. SEPARATE BUTTON

Press to select SEPARATE receiving mode.

6. DOWN BUTTON ▼

Press to decrease the display value.

7. UP BUTTON ▲


Press to increase the display value.

8. PARALLEL BUTTON

Press to select PARALLEL receiving mode.

9. FULL-ON BUTTON

Press to activate all channels FULL-ON mode, press it once more to return to normal mode.

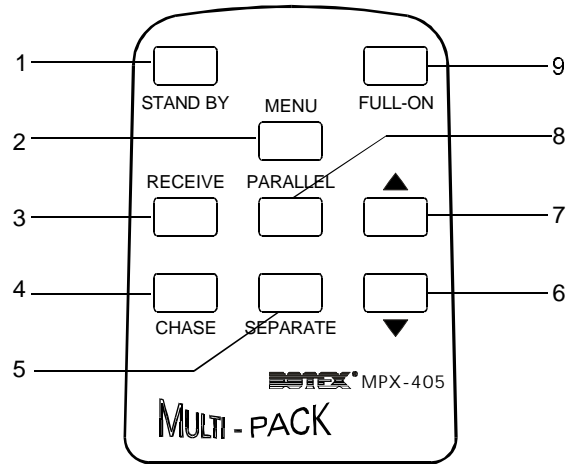

NOTE

1. TAKE OUT THE BATTERIES WHEN NOT USE FOR A LONG TIME.
2. NEVER MIX BATTERIES OF DIFFERENT TYPE.
3. MAKE SURE THE BATTERIES ARE LOADED WITH THE CORRECT POLARITY.

WARNING! This Product must be earthed. Disconnect power cable before opening. To prevent fire or shock hazard, do not expose this product to a high temperature or high humidity area.