



# USER *Instructions*

## SC-4

## STAND CHASER

### Product Descriptions

The SC-4 Stand Chaser features pre-set chasing patterns with AUDIO/ CHASE modes and four VDE sockets for channel output. In AUDIO mode, the patterns are executed with the music rhythms detected by the internal microphone. In CHASE mode, the patterns are controlled by the SPEED knob.

### GENERAL FUNCTION

1. **SPEED knob:** Use to adjust the chasing speed in CHASE mode.
2. **CHANNEL INDICATORS:** Green LEDs light when corresponding channel is turned on.
3. **BUILT-IN MICROPHONE:** Use to detect external music rhythms.
4. **MODE SELECT:** Select desired chasing mode from AUDIO / CHASE.
5. **POWER SWITCH:** Press to turn the power on /off.
6. **FUSE:** F6.3A 250V 5x20mm
7. **POWER INPUT:** AC 230V~50Hz, 6.3A

### SPECIFICATIONS



**POWER INPUT:** AC 230V~50Hz, 6.3A

**CHANNEL OUTPUT:** 0.05-5A/CH., Total 6.3A

**FUSE:** F6.3A 250V 5x20mm

**SIZE:** 8"x5 1/2"x2" (200x142x50mm)

**WEIGHT:** 2.6 lbs (1.17kgs)

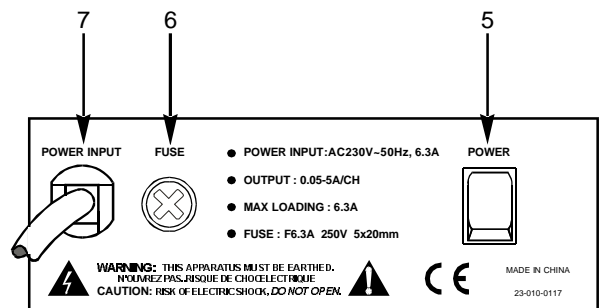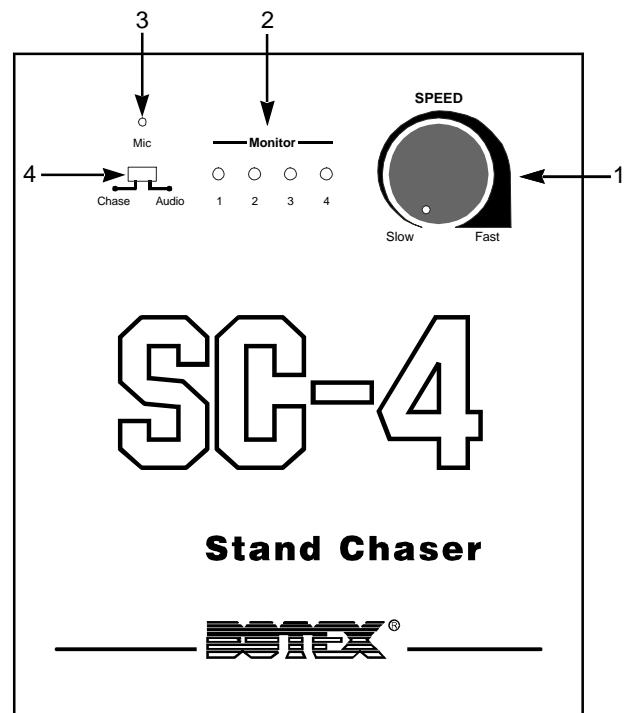

**WARNING!** This Product must be earthed. Disconnect power cable before opening. To prevent fire or shock hazard, do not expose this product to a high temperature or high humidity area.



24-004-0027